


INSTALLATION INSTRUCTIONS

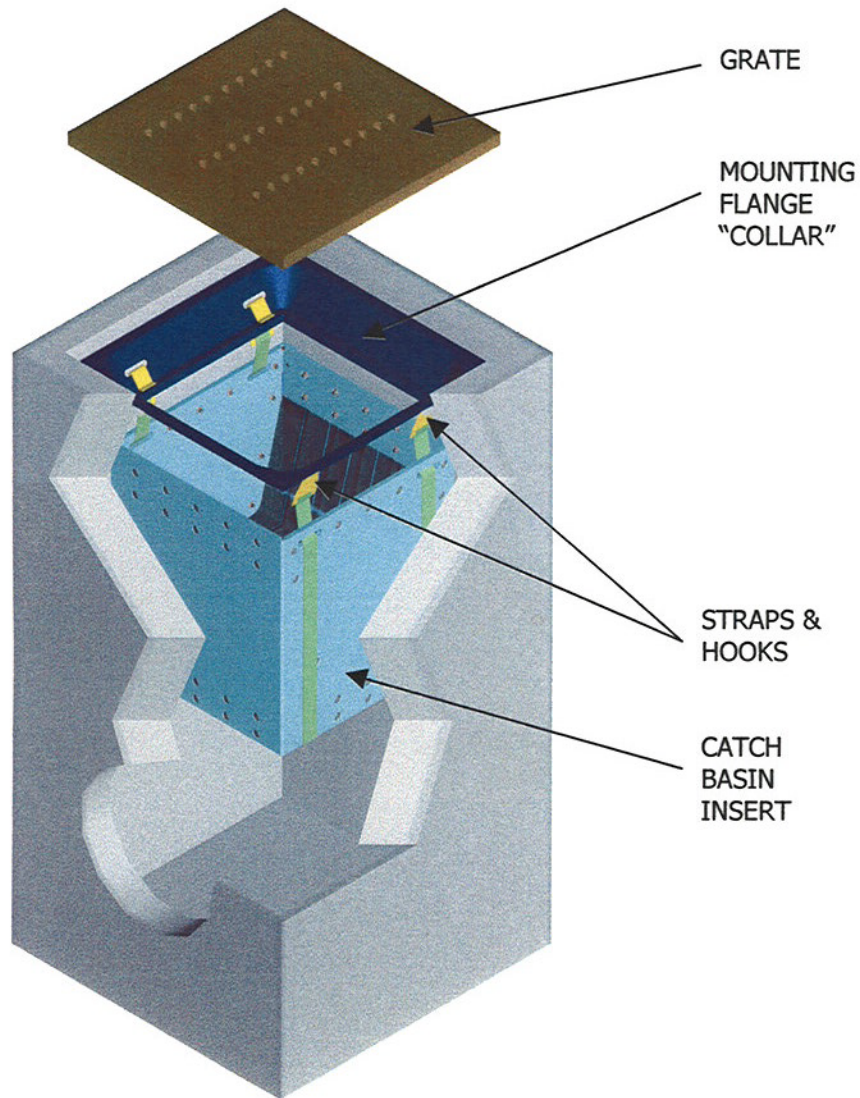

1. REMOVE GRATE
2. INSTALL MOUNTING FLANGE INTO DRAIN AND CONFIRM THAT IT CAN REST ALL THE WAY DOWN ONTO LIP, WHICH SUPPORTS GRATE. MINOR FITTING MAY BE REQUIRED, WHICH CAN BE EASILY ACCOMPLISHED USING A WOOD PLANE, RASP OR SABRE SAW.
3. AFTER FIT IS CONFIRMED, REMOVE THE MOUNTING FLANGE FROM BASIN AND ATTACH ULTRA URBAN FILTER TO THE MOUNTING FLANGE BY HOOKING THE "HOOKS" ON THE SUPPORT STRAPS INTO THE SLOTS ON THE MOUNTING FLANGE.
4. LOWER THE MOUNTING FLANGE AND THE ATTACHED ULTRA URBAN FILTER INTO THE BASIN.
5. CAREFULLY REPLACE THE GRATE.